

INSTRUCTION MANUAL

PRODUCT TYPE
TORQUE WRENCH

MODEL
7100 SERIES

OPERATION

	<p>1.Unlock</p>
	<p>2.Adjust</p>
	<p>3.Align scale</p>
	<p>4.Lock</p>
	<p>5.Apply torque</p>
<p>6. Angle indicator</p> <p><i>Use the angle indicator on the ratchet head for tightening with a desired angle.</i></p>	



SAFETY INSTRUCTIONS



WARNING

RISK OF FLYING PARTICLES

- NEVER USE TORQUE WRENCH TO BREAK LOOSE FASTENERS.
- NEVER USE TORQUE WRENCH AS A LEVER BAR.
- USE OF DAMAGED HAND TOOLS, SOCKETS, EXTENSIONS AND ACCESSORIES MAY RESULT IN INJURY.
- DO NOT USE TORQUE WRENCH AS A HAMMER.
- TORQUE WRENCHES NOT IN CALIBRATION MAY CAUSE DAMAGE TO PARTS OR TOOLS.
- DO NOT USE EXTENSIONS ON HANDLE AS DAMAGE TO TORQUE WRENCH WILL RESULT.
- OVER TIGHTENING OF FASTENERS MAY RESULT IN BREAKAGE.



ALWAYS USE EYE PROTECTION WHILE USING HAND TOOLS



WARNING

INJURY MAY RESULT FROM ELECTRICAL SHOCK


- HANDLE IS NOT INSULATED, DO NOT USE ON LIVE ELECTRICAL OR HIGH VOLTAGE CIRCUITS.

EXTENSIONS & ADAPTERS

When using an extension or adapter (increasing the effective length of the torque wrench) the output torque value will change. To calculate the new torque out of the wrench use the following formula:

- A = Torque exerted at end of adapter
- L = Distance between square drive and hand positions
- B = Wrench scale reading
- C = Length of adapter or extension

$$B = \frac{A \times L}{L + C}$$

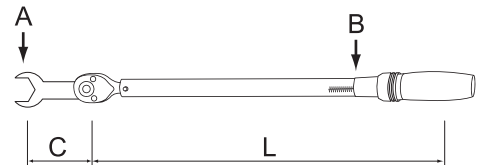

A number of variables including the length of the adapter or extension, length of the wrench and variations in hand position on the wrench will affect the accuracy of the above calculation.

CARE AND MAINTENANCE

The torque wrench is a precision instrument, and should be stored with care. Do not throw it around, use hammer with it, or use it as a lever bar.

The torque wrench is lubricated for life and should not be oiled. The only exception is the ratchet head which may be lubricated as needed for smooth operation.

The torque wrench is a precision measuring instrument. Calibration must be done regularly to ensure accuracy and its' the owner's responsibility. Suggested calibration period is at least every 12 months or even shorter dependig on situation.

Always store the torque wrench in the box after use to stay away from dirt and humidity.

Never disassemble the torque wrench by yourself. For any need to disassemble the torque wrench or repair it, please look for assistance from qualified service station. Any incorrect action to disassemble the torque wrench may result in damage of this instrument.

STANDARD

We calibrate each torque wrench at the factory using torque standards according to DIN ISO 6789 & ASME B107.14M-1994 and certifies it meets the accuracy requirements of specifications DIN ISO 6789 and ASME B107.14M-1994.

CONVERT FROM	TO	MULTIPLY BY	CONVERT FROM	TO	MULTIPLY BY	CONVERT FROM	TO	MULTIPLY BY
oz-in	in-lb	0.0625	ft-lb	Nm	1.356	Nm	ft-lb	0.73756
in-lb	in-oz	16	ft-lb	kg-m	0.1382	dNm	in-lb	0.885
in-lb	kg-cm	1.1519	ft-lb	in-lb	12	dNm	Nm	0.100
in-lb	ft-lb	0.083333	Nm	dNm	10	kg-cm	in-lb	0.8681
in-lb	kg-m	0.011519	Nm	kg-cm	10.20	kg-cm	Nm	0.09807
in-lb	Nm	0.1130	Nm	kg-m	0.10197	kg-m	ft-lb	7.236
in-lb	dNm	1.130	Nm	in-lb	8.8507	kg-m	Nm	9.807